

ROD & CABLE LINKAGE


FORD C-4 & C-6

All parts for the Ford C-4 and C-6 rod linkage shifter installation are included in the shiftworks package.

The Ford C-4 and C-6 cable installation is based upon the use of a B&M Cable and cable installation kit. The C-4 transmission will use the B&M Bracket and Lever kit #50498, and the C-6 will use kit #40497. Shiftworks will supply its own lever and an adaptor to use on the shifter to mount the B&M cable system.



B&M Cable installed using Shiftworks adaptor.

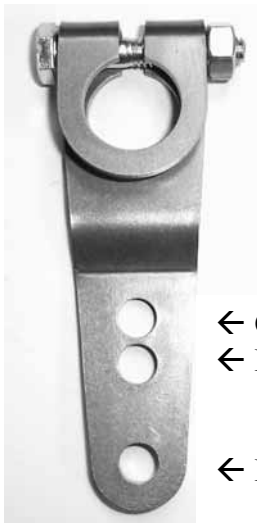

- ← Cable
- ← Rod Short Arm
- ← Rod Long Arm

For cable installations the lever points down, adjustment is made at either the cable or by rotating the lever on the shaft. Cable installations use the hole with the shortest radius.

For Rod Linkage the Arm Points Up and choice of holes depends upon the length of the arm at the shifter. The shorter arm provides more clearance but will not have as much mechanical advantage.